 


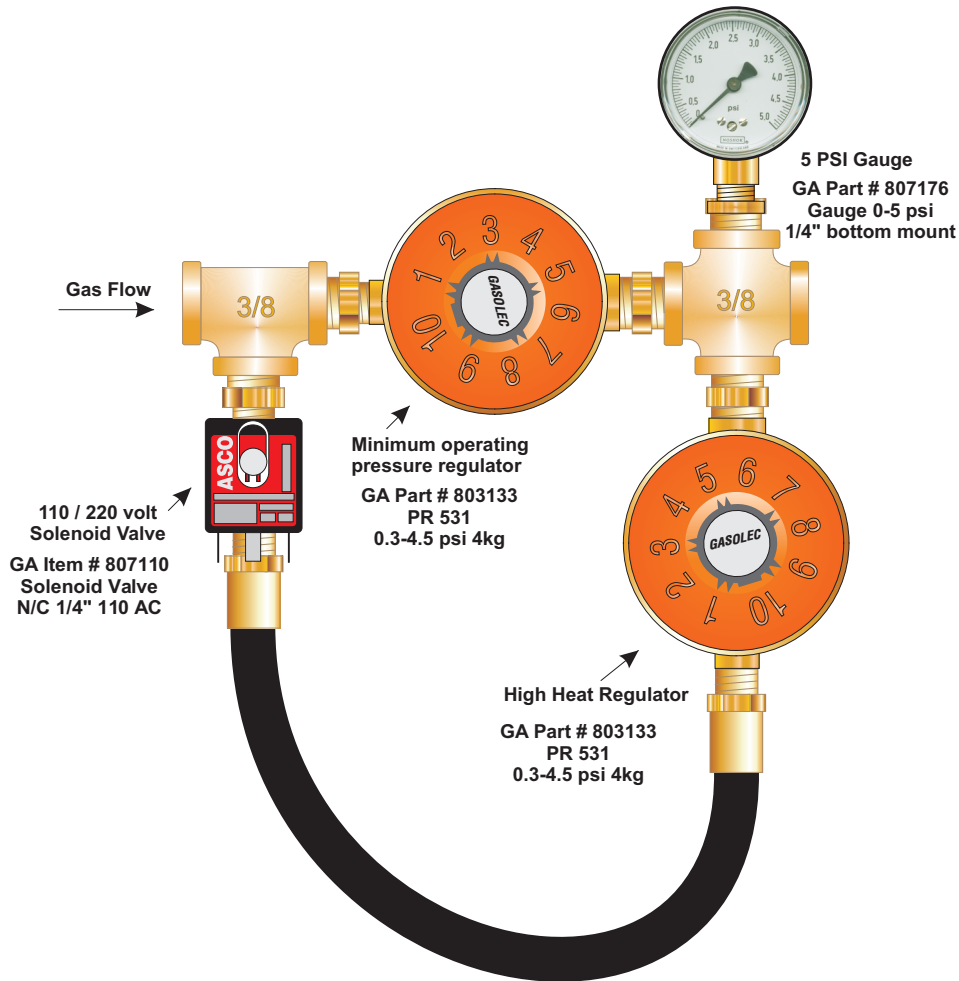

GA Item # 804144

HLM 20-310 High/Low Gas Controller

Controls groups of heaters totaling (up to) 205,000 Btu's (LPG)



WESTERN HEMISPHERE
Gasolec America, Inc.
Phone: 1-918-455-4588
Fax: 1-918-455-4396

5818 S. 129th E. Ave.
Tulsa, OK 74134



Your energy savings experts

 
www.gasolecusa.com

EASTERN HEMISPHERE
Gasolec B.V.
Phone: (+31)172-636636
Fax: (+31)172-636630

P.O. Box 183
2410 AD Bodegraven
The Netherlands

1. Source of gas

- A. LP tank
- B. LP Cylinders Battery
- C. Metered Natural Gas

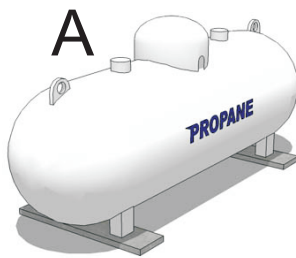

or



or



 
2. "First Stage Regulator"

Typically located at the tank,
tank battery, or NG meter.



Gasolec PR 300M
GA Item # 803205

1st Stage Regulator
(at tank or battery)

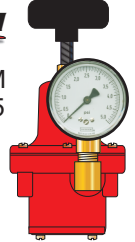


3. "Second Stage Regulator"

located at the building



Gasolec PR 300M
GA Item # 803205

 2nd Stage Regulator
(at Building)

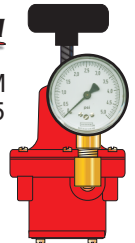

4. Select the thermostat



Your central controller

or



Gasolec ETC Digital Thermostat
GA Item # 802105

or



Gasolec MT 16 Thermostat
GA Item # 802100

