


HLM 20-300/F
High/Low Gas Controller
Controls groups of heaters totaling (up to) 375,000 Btu's (LPG)

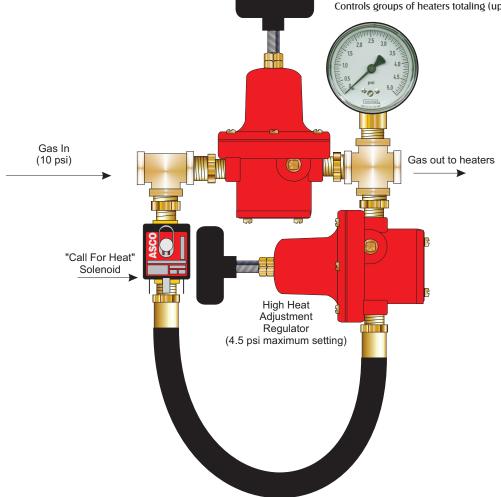

WESTERN HEMISPHERE Gasolec America, Inc. Phone:1-918-455-4588 Fax: 1-918-455-4396

5818 S.129th E. Ave. Tulsa, OK 74134




Your energy savings experts

EASTERN HEMISPHERE Gasolec B.V.

Phone: (+31)172-636636 Fax: (+31)172-636630

> P.O. Box 183 2410 AD Bodegraven The Netherlands

- 1. Source of gas
 - A. LP tank
 - **B. LP Cylinders Battery**
 - C. Metered Natural Gas

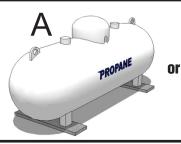

or



2. "First Stage Regulator"
Typically located at the tank, tank battery, or NG meter.



3. "Second Stage Regulator" located at the building



4. Select the thermostat



Your central controller











